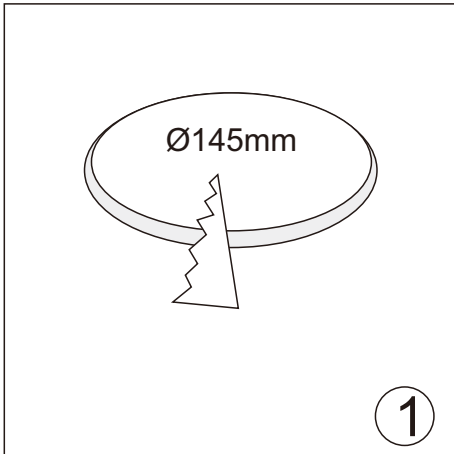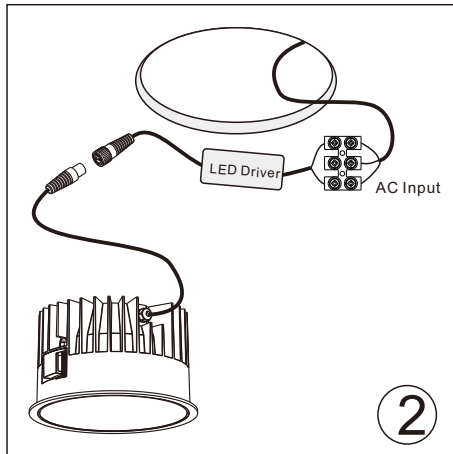# DP145R Installation Instruction

Ø145mm

1

Ceiling Cut Hole Ø145mm

LED Driver
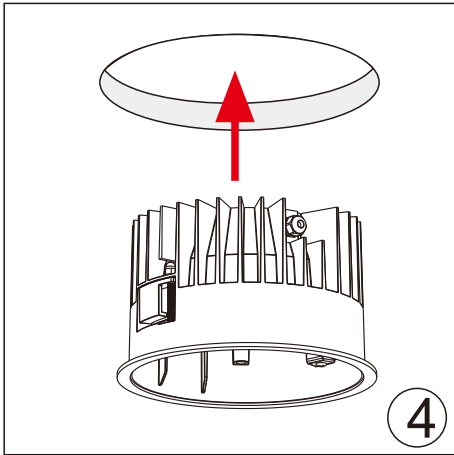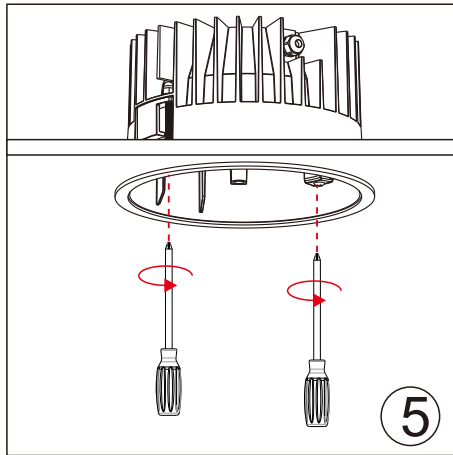
AC Input

2

Connect Wire

unlock the hook

3
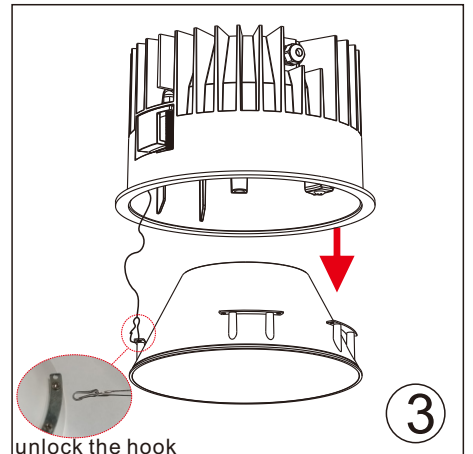
Unlock and take out the front ring.

4

Put the lamp into the cut hole.

5

Use the screw driver to tighten the screw.

Magnetic

lock the hook

6

7

LED Driver

AC Input

Finish